

nobü®
the art of pleasure


WÖSH

PERSONAL MASSAGER
INSTRUCTION MANUAL

GETTING STARTED

Congratulations on your purchase. Follow these simple steps and you will be enjoying a luxurious massage in no time.

- With first time use, WÖSH is Factory pre-charged with 50% power available or less. Please charge it if its not turning ON.
- Press the "⏻" to turn ON your WÖSH. The device will go to the first vibrating program mode.
- You can now activate a choice of 10 different vibration intensities by pressing the "⏻" button. Continue pressing "⏻" to choose/adjust the intensity you desire.
- To turn OFF your WÖSH, simply press the "⏻" For 3 seconds.

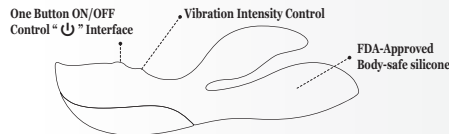

CHARGING YOUR VIBRATOR

- When the vibrations become weak, or stop completely, and the LED light is still on, the WÖSH needs to be re-charged.
- Insert the DC plug into the DC port on the underside of your WÖSH (see illustration below).
- Insert the other end of the DC recharging cord into any USB socket. The red LED will blink to indicate it is recharging. When it is Fully charged (After 3 hours), the light will remain on.



Waterproof open charging socket
(Please plug in gently)

BENEFITS OF USING THIS



RIGID SHAFT



2 MOTORS



10 PROGRAMS



100% WATERPROOF



LIGHT 113g



MEDICAL GRADE SILICONE

NOBÜ MASSAGER



EXTREMELY QUIET
>40dB



RECHARGEABLE
VIA USB CABLE



G-SPOT
FRIENDLY



CLITORAL
FRIENDLY



LUXURIOUS



SIMPLE TO USE

NOTE

- The WÖSH body massager is not classified as a medical device. Do not massage around your chest or throat area, and if you experience severe discomfort during the massage, you should stop using the WÖSH and consult your healthcare provider.

SPECIFICATIONS

SIZE: 6¼" x 1½" x 2¼"

WEIGHT: 113g

MATERIALS: Matte ABS/FDA-Approved Body-safe silicone

BATTERY: Li-Ion 1020mAh 3.7V

CHARGING: 3 hour at 5V 500Ma

USER TIME: Up to 3 hours Depending on Power Setting

MAX NOISE LEVEL: <40dB

nobü®
the art of pleasure

CLEANING, STORAGE, AND SAFETY

- You can wash the silicone section with warm water and antibacterial toy cleaner. Rinse with clean hot water and pat dry with a lint-free cloth or towel. Never use cleansers containing alcohol, petrol or acetone.
- Store your WÖSH in a clean, dry dust-free place. Avoid leaving it in direct sunlight and NEVER expose it to extreme heat.

nobü®
the art of pleasure